


# Temperature Protocol



## GR28008012 28°C to 8°C (12 hour)

Temperature Protocol

|       | Start Temp °C | End Temp °C | Start Time Min | End Time Min | Description | Time Hr |
|-------|---------------|-------------|----------------|--------------|-------------|---------|
| Step1 | -             | 28          | 0              | 30           | Prep-Time   | 0.5     |
| Step2 | 28            | 25          | 30             | 120          | Ramp-down   | 2.0     |
| Step3 | 25            | 15          | 120            | 480          | Ramp-down   | 8.0     |
| Step4 | 15            | 8           | 480            | 720          | Ramp-down   | 12.0    |
| Step5 |               |             |                |              |             |         |

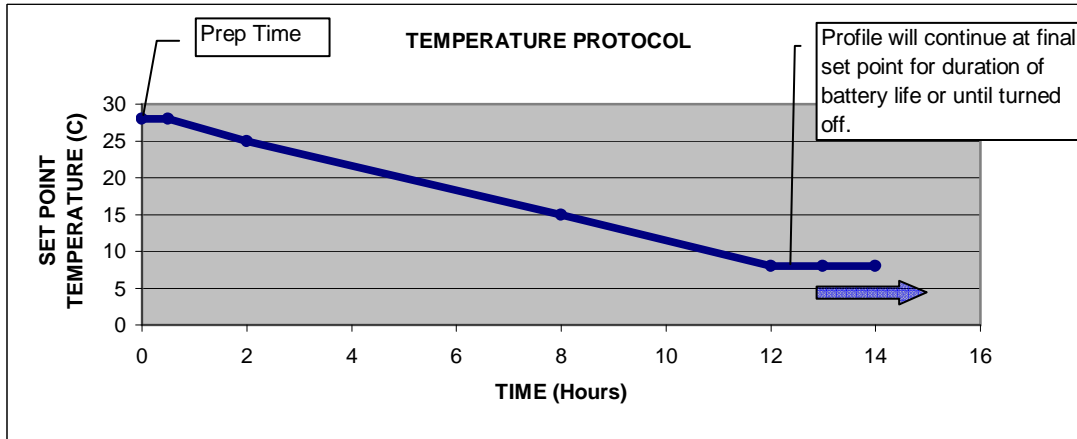

www.microQ.com

Temperature Protocol for Transport of Chilled Semen

Genesis Series Shipping Devices & Smart Chips